

YouTurn™


MUSIC PAGE HOLDER

"You Turn The Page & It Stays!"™

www.youturnmusic.com


INSTRUCTIONS FOR USE ON PIANO RACK

1. Place the *YouTurn*™ into your book.
2. Attach a treble clef clip onto the page or pages to be turned.
3. Turn your page and it will stay flat.
4. You can turn multiple pages and you can also turn them back.

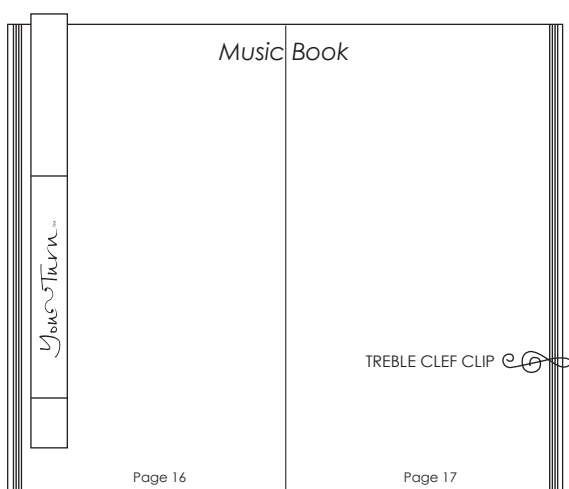

TIPS FOR BEST RESULTS

- Attach treble clef clips as shown below.

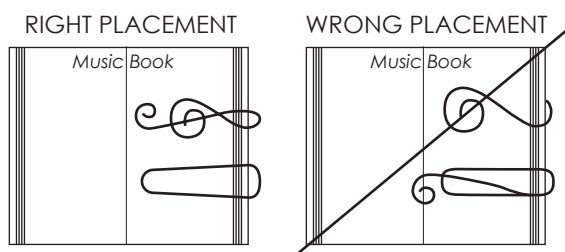


- Stagger the clips on each successive page so that they do not bunch on top of each other after turning the page.
- Place the clips on the page in a location where they will be attracted to the magnet once the page is turned or slide the magnet up or down the metal strap to correspond to the positioning of the treble clef clips.
- *YouTurn*™ may be used on either side of a book, depending on which part of the book you are working in. For thicker books, you may wish to purchase two *YouTurn*™ for simultaneous use on both sides of a book.

TIPS FOR USE WITH A MUSIC STAND


1. Metal Stand

- *YouTurn*™ may also be used with loose music sheets on a metal music stand. Remove the magnet from the strap as shown below.
- Place *YouTurn*™ magnet directly on the metal stand. Then attach the treble clef clips to your music sheets and they will stay secure on your stand.

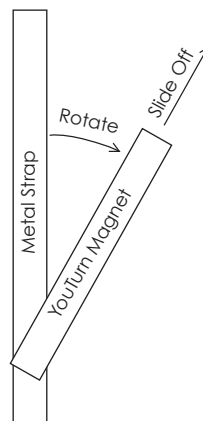

2. Manhasset Stand (aluminum)

- *YouTurn*™ may be used on an aluminum Manhasset stand. Place metal strip below stand and *YouTurn*™ magnet on top of stand in same location as shown in profile view below (*stand is between strap and magnet.*)

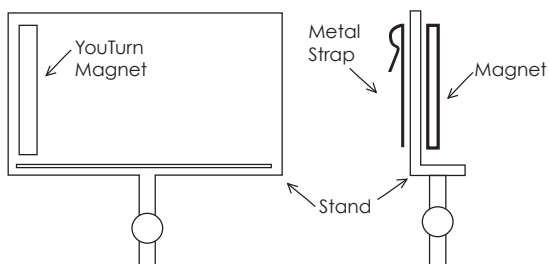

! CAUTION

- Do not drop *YouTurn*™ on hard surfaces as it may break or chip the magnet. The edges of the magnet will be very sharp. Do not use if damaged or broken. Replacement magnets may be purchased.
- For protection of your new *YouTurn*™ when not in use, keep it in your book or in the box provided.
- *YouTurn*™ uses a powerful magnet and therefore may de-magnetize your credit or debit cards, or damage electronic devices such as a mobile phone if contact is made. Store your *YouTurn*™ in a separate area.
- *YouTurn*™ is NOT a toy. Small parts.